

USER MANUAL

_MINIFUSE 2 OTG

ARTURIA

_The sound explorers

Special Thanks

DIRECTION

Frédéric BRUN	Kevin MOLCARD	Germain MARZIN
Tobias BAUMBACH	Phillippe CAVENEL	

DEVELOPMENT

Laurent BARET	Arthur RÖNISCH	Antoine MOREAU	Benjamin REYNIER
Jérôme LAURENT	Corentin DEREY	Jérôme BLANC	Jean-Yves TISSOT
Daire O'NEILL	Nadine LANTHEAUME	Aurore BAUD	Valentin FOARE
Valentin DEPOISIER	Timothee BEHETY	Lionel FERRAGUT	

DESIGN

Martin DUTASTA	Florian RAMEAU	Leo DER STEPANIANS
Morgan PERRIER	Axel HARTMANN	Farès MEZDOUR
Olivier HEBERT	Maxence BERTHIOT	Samuel TRACOL

QUALITY ASSURANCE

Thomas BARBIER	Adrien SOYER	Aurélien MORTHA	Arthur PEYTARD
Matthieu BOSSHARDT	Emilie JACUSZIN	Enrique VELA	Nicolas NAUDIN
Julien VIANNENC	Marion LOUBET	Anthony LE CORNEC	Nicolas STEWRMANN
Bastien HERVIEUX	Félix ROUX	Roger SCHUMANN	Germain MARZIN

BETA TESTING

Paolo NEGRI	Luca LEFÈVRE	Andrew HENDERSON	Adán SÁNCHEZ DE PEDRO
Marco CORREIA	David BIRDWELL	Chuck ZWICKY	CRESPO
Bernd WALDSTÄDT	Navi RETLAV	George WARE	Are LEISTAD
Khutornoy Maksim	Gert BRAAKMAN	Tony FLYING SQUIRREL	Luis RODRIGUEZ
JUREVICH	Pierre GACHET	Terence MARSDEN	Bernd WALDSTÄDT
Erik VAN DE VOSSENBERG	Charles CAPSIS IV	Kirke GODFREY	

MANUAL

Mike METLAY (writer)	Jimmy MICHON	Félicie KHENKEO
----------------------	--------------	-----------------

© ARTURIA SA - 2025 - All rights reserved.

26 avenue Jean Kuntzmann
38330 Montbonnot-Saint-Martin
FRANCE

www.arturia.com

Information contained in this manual is subject to change without notice and does not represent a commitment on the part of Arturia. The software described in this manual is provided under the terms of a license agreement or non-disclosure agreement. The software license agreement specifies the terms and conditions for its lawful use. No part of this manual may be reproduced or transmitted in any form or by any purpose other than purchaser's personal use, without the express written permission of ARTURIA S.A.

All other products, logos or company names quoted in this manual are trademarks or registered trademarks of their respective owners.

Product version: 1.0.0

Revision date: 17 October 2025

Thank you for purchasing the Arturia MiniFuse 2 OTG!

This manual covers the features and operation of Arturia's **MiniFuse 2 OTG**. MiniFuse 2 OTG is a professional-grade audio interface with added flexibility for audio production setups that require two digital devices (e.g. a laptop and a smartphone). We are confident that the MiniFuse 2 OTG will become an indispensable tool in your kit, whether you're recording live music, streaming content to your online audience, or field recording on the go.

Registration

Be sure to register your MiniFuse 2 OTG as soon as possible! The first time you run the [MiniFuse Control Center](#) software, you will be prompted to register your unit. You can also select **Register...** from the Main Menu at the far left of the [Top Toolbar](#) to do this at a later time.

Registering your MiniFuse 2 OTG provides the following benefits:

- Access to the latest version of the Arturia Software Center and MiniFuse Control Center applications
- Special offers restricted to MiniFuse owners

As a registered owner, you also have access to an exclusive software bundle that includes:

- Arturia's Pre 1973, Rev PLATE-140, Delay TAPE-201, Chorus JUN-6 audio effects
- Arturia's Analog Lab Intro containing thousands of ready-to-use instruments and sounds
- Ableton Live Lite
- iZotope Voice Enhancement Assistant
- Steinberg Cubase LE 14 and Cubasis LE 3
- 3-month complimentary subscription to Splice
- 3-month complimentary subscription to Auto-Tune Unlimited
- Exclusive Ableton Live Lite sessions curated by producers around the globe

MiniFuse 2 OTG is easy to use, so you'll probably start experimenting with it right out of the box. However, please be sure to read this manual even if you are an experienced user, as we describe many useful tips that will help you get the most out of your purchase. That's especially important since the interface's OTG (on-the-go) capabilities are something brand new to most users.

We're sure you will find MiniFuse 2 OTG a powerful tool in your setup and we hope you'll use it to its fullest potential.

Happy music making!

The Arturia team

Special Message Section

Specifications Subject to Change:

The information contained in this manual is believed to be correct at the time of printing. However, Arturia reserves the right to change or modify any of the specifications without notice or obligation to update the hardware that has been purchased.

IMPORTANT:

The product and its software, when used in combination with an amplifier, headphones or speakers, may be able to produce sound levels that could cause permanent hearing loss. DO NOT operate for long periods of time at a high level or at a level that is uncomfortable.

If you encounter any hearing loss or ringing in the ears, you should consult an audiologist.

NOTICE:

Service charges incurred due to a lack of knowledge relating to how a function or feature works (when the product is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owner's responsibility. Please study this manual carefully and consult your dealer before requesting service.

Precautions include, but are not limited to, the following:

1. Read and understand all the instructions.
2. Always follow the instructions on the device.
3. Before cleaning the device, always remove the USB cable. When cleaning, use a soft and dry cloth. Do not use gasoline, alcohol, acetone, turpentine or any other organic solutions; do not use a liquid cleaner, spray or cloth that is too wet.
4. Do not use the device near water or moisture, such as a bathtub, sink, swimming pool or similar place.
5. Do not place the device in an unstable position where it might accidentally fall over.
6. Do not place heavy objects on the device. Do not block openings or vents of the device; these locations are used for air circulation to prevent the device from overheating. Do not place the device near a heat vent at any location with poor air circulation.
7. Do not open or insert anything into the device that may cause a fire or electrical shock.
8. Do not spill any kind of liquid onto the device.
9. Always take the device to a qualified service center. You will invalidate your warranty if you open and remove the cover, and improper assembly may cause electrical shock or other malfunctions.
10. Do not use the device with thunder and lightning present; otherwise it may cause long distance electrical shock.
11. Do not expose the device to hot sunlight.
12. Do not use the device when there is a gas leak nearby.
13. Arturia is not responsible for any damage or data loss caused by improper operation of the device.

Table Of Contents

1. INTRODUCTION.....	2
1.1. What is an audio interface and why would I need one?.....	2
1.2. What is OTG?.....	2
1.3. MiniFuse 2 OTG FEATURES OVERVIEW.....	3
2. CONNECTION DIAGRAM.....	4
3. FRONT PANEL FEATURES.....	6
4. REAR PANEL FEATURES.....	8
5. SETUP.....	9
5.1. Changing default system audio input and output.....	10
5.1.1. macOS.....	10
5.1.2. Windows.....	11
5.2. Using the MiniFuse 2 OTG as an audio device with your DAW.....	12
5.2.1. Configuring audio in Ableton Live.....	13
5.2.2. Configuring audio in FL Studio.....	14
5.2.3. Configuring audio in Analog Lab.....	14
5.3. Recording audio into your DAW.....	16
5.4. Using the MiniFuse 2 OTG as a standalone device with your smartphone.....	17
6. MINIFUSE CONTROL CENTER.....	18
6.1. Top Toolbar.....	19
6.2. Settings Window.....	20
6.3. Device Controls and Input Metering.....	23
6.3.1. General advice for setting input levels.....	24
6.4. Loopback (Mac) and Outputs (Windows).....	25
7. LOOPBACK RECORDING.....	26
7.1. Loopback (macOS).....	26
7.2. Software Loopback Solution (Windows).....	29
7.2.1. Physical vs. Loopback Inputs and Outputs.....	30
8. A QUICK PRIMER ON DIGITAL AUDIO.....	35
8.1. What is latency?.....	35
8.2. Sample Rate.....	35
8.3. Buffer Size.....	36
8.4. A red herring.....	37
8.5. How to deal with latency.....	37
8.5.1. Recording live audio.....	37
8.5.2. Recording a MIDI part.....	37
8.5.3. Mixing and mastering.....	37
9. SPECIFICATIONS.....	38
9.1. Box Contents.....	38
9.2. Hardware Specifications.....	38
10. DECLARATION OF CONFORMITY.....	40
11. SOFTWARE LICENSE AGREEMENT.....	41

1. INTRODUCTION

Thank you for purchasing our compact audio interface, the MiniFuse 2 OTG. We at Arturia are committed to delivering excellent products that satisfy the needs of modern musicians and producers - we are confident that the MiniFuse 2 OTG will be a perfect companion to any computer-based music production and recording setup.

1.1. What is an audio interface and why would I need one?

An *audio interface* is an outboard device that handles processing of audio input and output. While all laptop and desktop computers these days come equipped with integrated soundcards, in practice these are only meant for casual use and are, in most cases, insufficient for the demanding tasks of audio production and recording.

The MiniFuse 2 OTG is an affordable, professional-grade dedicated audio interface that offers the following advantages over a typical onboard soundcard:

- Optimized for low-latency performance
- Microphone preamp(s) for crisp, present recording of vocals and instruments
- High-impedance input(s) to directly record your guitar or bass.
- Headphone and speaker system outputs for flexible monitoring.
- Loopback recording for recording computer audio without any messy hardware or software configurations.
- Direct Monitoring for monitoring your performance without any processing latency.

1.2. What is OTG?

OTG stands for *on-the-go*. In today's world of content creation and streaming, the smartphone has become an indispensable tool for field recording, sharing interviews, playing back content, and much more. However, actually connecting a smartphone to a computer isn't that easy - an audio interface can only speak to one device at a time, so there's no easy way to share digital audio between the two.

Well, before now. The MiniFuse 2 OTG features *two* USB-C ports labeled **USB COMPUTER** and **USB OTG**, one for each device, and you can switch between them with the push of a front-panel button. Audio can flow between them, and you can decide which audio stream you want to direct to your DAW, streaming software, headphones, and monitor speakers. You can even attach a battery pack to the COMPUTER port to supply the MiniFuse 2 OTG with power, and use it with your smartphone or laptop when you're out in the field... on the go.

1.3. MiniFuse 2 OTG FEATURES OVERVIEW

- 2 x combo Mic/Inst/Line XLR inputs
 - Switchable 48V phantom power for condenser mics
 - High-impedance switches for use with guitars/basses on each input
- 2 x 1/4" TRS balanced line outputs
- 1 x 1/4" stereo headphone output
- 1 x USB2 type A hub (low power)
- 2 x selectable USB sources:
 - USB-C Computer interface compatible with PC, Mac, fully USB 2.0 compatible
 - USB-C OTG interface to add a second source (PC, Mac, smartphone)
- Bus-powered, or attach power supply to computer port for OTG use
- Up to 192 kHz / 24 bits
- Loopback stereo input (at all sample rates)

2. CONNECTION DIAGRAM




1a and 1b) XLR/TRS Inputs for microphones, guitars/basses, or other line-level instruments e.g. keyboards

2) 1/4" TRS Headphone output



3) TRS Outputs to connect powered speakers or mixers/amplifiers

4) USB-C OTG port for connection to a smartphone or computer. iOS devices with a Lightning port will require the Apple Lightning to USB 3 Camera Adapter (shown below) to provide power and data connections.

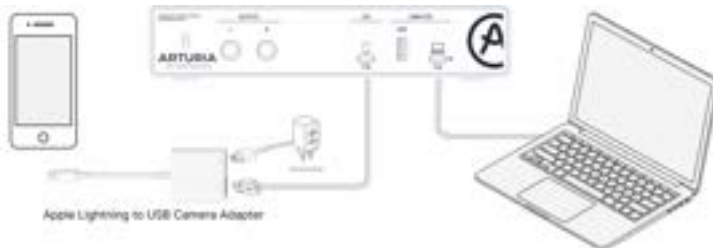


Apple Lightning to USB 3 Camera Adapter for Lightning (power) and USB-A (data) cables

i NOTE: We strongly recommend using a genuine Apple adapter rather than a third-party device. Apple adapters contain "smart" circuitry that is periodically auto-updated for feature compatibility with new devices.

5) USB-A Hub port allowing connection of thumb drives, controllers or other USB devices requiring less than 200 mA

6) USB-C Computer port for connection to a computer (bus power) or external power supply

 NOTE: The OTG port will not power the MiniFuse 2 OTG. You must have the Computer port connected to another device, or to a battery pack or other USB power source for standalone use. (A device that takes power from a USB port is called *bus-powered*. In the case of the MiniFuse 2 OTG, bus power is provided from the Computer port but not the OTG port.) NOTE: We strongly recommend using the included USB-C cables (one USB-C, one USB-A) with your interface when connecting your device to a computer or smartphone. The included USB cables have been specially designed for the Arturia MiniFuse 2 OTG, and third-party cables may cause unreliable operation.

3. FRONT PANEL FEATURES

The front panel of the MiniFuse 2 OTG provides access to most of the essential features on the unit.



1) The two **Input jacks** accept balanced XLR for microphones, 1/4" unbalanced TS for guitars/basses, or 1/4" balanced TRS for line-level sources. If a device is plugged into the 1/4" jack, press the **INSTRUMENT** button to engage the high-impedance circuit for the best sound; otherwise the input will expect a line-level signal.

i NOTE: You can use any 1/4" cable for line-level sources, but you'll get the best audio performance and highest headroom with a balanced signal from a TRS cable.

2) The two **GAIN** knobs control the gain of the two Input preamps. Use it to adjust the volume of the input to ensure that you are capturing a good signal without overloading. Each knob has a built-in LED indicator to help with setting input gain. When an instrument or microphone input signal is detected, the LED will light up blue. If the input signal overloads, the LED will turn red. If this happens, turn down the Gain knob.

3) The two **INSTRUMENT** buttons (with guitar icons) toggle the high-impedance circuit for the corresponding input. They light up blue when turned on.

i When recording instruments with pickups, like guitar and bass, using the high-impedance setting adjusts the internal circuit so that you can plug the instrument directly into the input without having to first plug into an amp or a direct box. When using other types of inputs, like synthesizers or microphones, turn this off.

4) The **48V** button turns on *phantom power* for the input(s). Phantom power delivers DC power to a connected microphone, and may be required to get a good signal (or *any* signal!) out of certain types of microphones.

i Please read the following recommendations regarding when and how to use phantom power:

1. Only certain types of microphones, like condenser microphones, *require* phantom power to function properly. With rare exceptions, dynamic mics don't require phantom power, and phantom power will never harm a dynamic mic. That means you can have a condenser mic on one input and a dynamic mic on the other without fear of harm. Please check your microphone's user manual to determine whether it requires phantom power.
2. Phantom power may damage some equipment, like certain ribbon microphones or line-level equipment like synthesizers. Only use phantom power with microphones that require it. Again, check the mic's user manual.
3. Do *not* connect or disconnect microphones while phantom power is turned on - this could damage your mic. Turn off phantom power first, wait a few seconds, and *then* connect or disconnect the microphone.

5) The Front Vu Meters show the signal level for an input or output audio stream of your choice. High-resolution input metering is available through the [MiniFuse Control Center \[p.18\]](#) application, which is also where you can choose the audio source to have its level displayed on the Front Vu Meters.

6) The Monitor Volume knob controls the volume of the signal sent to the L and R Outputs on the rear panel.

7) The Monitor Mix knob controls the mix of direct **INPUT** signal and **USB** computer audio playback. When set all the way to the left, only the Input signal is heard; when set all the way to the right, only the USB signal is heard. Set the Mix knob for an appropriate blend of the two.

i Recording live instruments on a computer can sometimes present challenges, depending on your computer configuration and CPU load. Since your computer processes incoming and outgoing audio in buffer "chunks", this can result in delayed playback of the input signal (*latency*), which can create distracting delays that could throw off a performance. Instead of monitoring the input signal through the computer and back, the MiniFuse 2 OTG uses **Direct Monitoring**. The Input signals are routed directly to the Outputs inside the interface, so you hear them instantly, without any latency. To read more about latency and how to best deal with it, please see the [A Quick Primer On Digital Audio \[p.35\]](#) section of this manual.

8) The USB Source button selects which of the two rear-panel USB-C ports is sending audio to the MiniFuse 2 OTG's Monitor Outputs. When the button is unlit, the COMPUTER port is connected; when it is lit, the OTG port is connected.

9) The Headphone Volume knob (headphone icon) adjusts the volume of the Headphone output.

10) The 1/4" stereo Headphone output provides the same audio signal as the Monitor Output, but has its own independent volume control (**9**).

i Listening to loud music for prolonged periods can have a negative impact on your hearing, and this is especially true when using headphones. We recommend avoiding high headphone volume levels whenever possible, and taking frequent breaks to give your ears a rest.

4. REAR PANEL FEATURES

The rear panel of the MiniFuse 2 OTG provides access to audio and USB connections.



1) The Left and Right **Outputs** are 1/4" balanced TRS jacks. They can be connected directly to active studio speakers or other devices such as amplifiers and mixers. The Output level is controlled by the large Monitor Volume knob on the front panel.

2) The **OTG** port is a USB-C connection that can be used for computers or smartphones. Audio can be routed from the OTG port to your computer even when the MiniFuse 2 OTG is being controlled from the Computer port. This port cannot power the MiniFuse 2 OTG, but it also won't drain power from your device. The OTG port is active when the front-panel USB Source button light is on.

3) The **HUB** is a convenient USB-A port that lets you plug in other USB devices, like thumb drives or copy protection keys.

i While the HUB port is sufficient for devices up to 200 mA, it may not provide enough power for some devices that require more power. In these situations, we recommend plugging such devices directly into your computer, or into a separate powered USB hub.

4) The **Computer** port is a USB-C connection that allows communication between the MiniFuse 2 OTG and your primary computer. This port provides bus power to the interface; if you want to use it on the go, you can attach a battery pack or other power supply to this port and connect the MiniFuse 2 OTG to your computer or smartphone via the OTG port. The Computer port is active when the front-panel USB Source button light is off.

5) Kensington lock - this optional security slot can be used for securing the interface using a Kensington lock cable.

5. SETUP

Open the url <https://link.arturia.com/minifuse-2-otg-start> in your browser and follow the instructions to download the [MiniFuse Control Center \[p.18\]](#) application (**MFCC**). When you launch MFCC for the first time, you will be prompted to register your MiniFuse 2 OTG.

Benefits of registering:


- Free exclusive effects and instruments from Arturia, Ableton, and many more
- Access to tutorials, sound banks, and helpful content to get you started
- Regular free firmware updates
- Exclusive discounts on Arturia products as a registered user



While it is possible to use the MiniFuse 2 OTG immediately without the MiniFuse Control Center application, we strongly recommend following the steps outlined in this section to initialize your MiniFuse 2 OTG so that you can take advantage of all of its features. The MiniFuse Control Center installer includes the MiniFuse ASIO driver for Windows, enabling the best performance from your MiniFuse.

Once you have downloaded and installed the **MiniFuse Control Center** application, double-click to start it.

You will see the following pop-up window. Press **OK** to complete the installation.

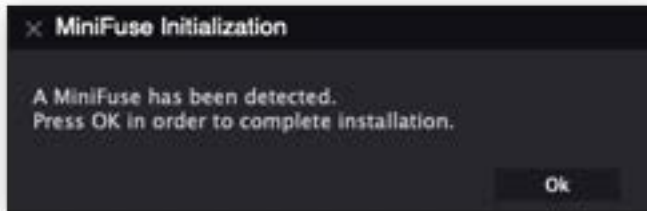


Congratulations, your MiniFuse 2 OTG is now ready to use! For more information and support online, you may visit <https://www.arturia.com/support>.

For more information on the features available in the MiniFuse Control Center application, see the [MiniFuse Control Center \[p.18\]](#) section of this manual.

5.1. Changing default system audio input and output

If you would like to use the MiniFuse 2 OTG as your computer's default audio playback and recording device, follow the instructions below.

 Most pro audio applications have their own audio preferences where you can select the MiniFuse 2 OTG as the active audio device. If you intend to only use the MiniFuse for playback and recording with these applications, it is not necessary to change the default system audio input and output.

5.1.1. macOS

- 1) Navigate to your **Applications** folder.
- 2) Double-click **System Preferences** or **System Settings** (depending on the version of macOS).
- 3) Click the **Sound** icon.
- 4) If you would like all computer audio - such as audio from browsers and movie players - to be played back through the MiniFuse 2 OTG, click the **Output** tab and select the MiniFuse as the default output device.




5) If you would like to use a microphone connected to the MiniFuse 2 OTG as the default sound input into your computer, click the **Input** tab and select the MiniFuse as the default input device.



5.1.2. Windows

- 1) Navigate to **Settings**.
- 2) Click the **Sound** tab.
- 3) If you would like all computer audio - such as audio from browsers and movie players - to be played back through the MiniFuse 2 OTG, choose "MAIN Left/Right (MiniFuse 2 OTG)" from the **Output** menu.
- 4) If you would like to use a microphone connected to the MiniFuse 2 OTG as the default sound input into your computer, choose the input channel from the **Input** menu.

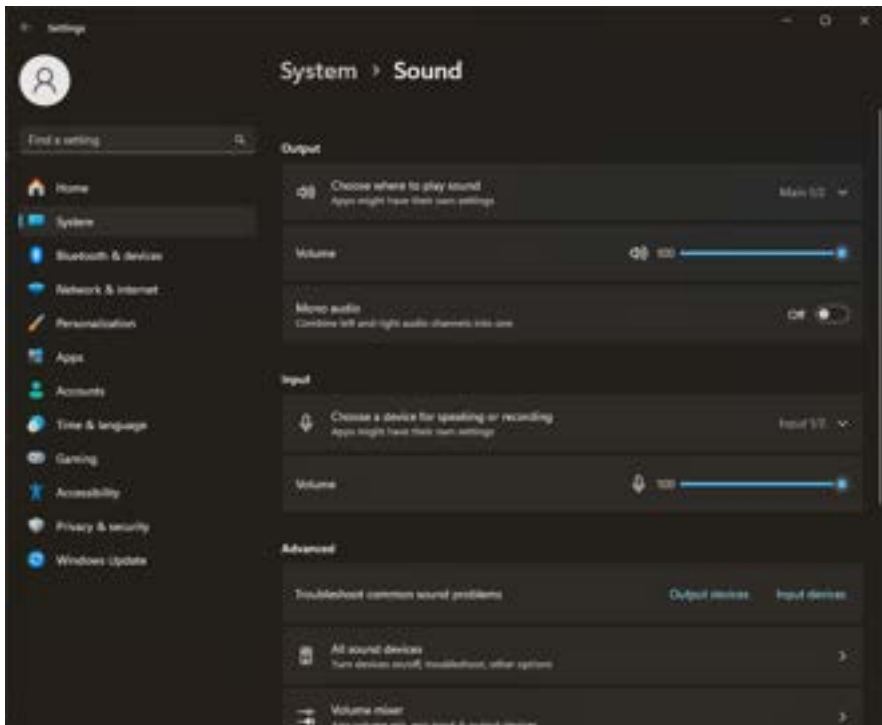

5.2. Using the MiniFuse 2 OTG as an audio device with your DAW

Most audio applications have their own audio settings, where you can select the active audio device. Here we will show you how to configure the MiniFuse 2 OTG with several audio applications. The process will be similar in other audio applications.

i Core Audio is a native Mac audio protocol. All audio devices are built on top of this framework. Windows contains several available audio protocols. ASIO is optimized for low latency and high fidelity. We recommend using the ASIO driver provided by Arturia for best results.

Regardless of which application you use, there will be several additional important controls in the audio preferences:

- **Buffer Size** determines how quickly the computer will process audio data - the smaller the buffer size the faster it will process audio, resulting in less latency at the expense of higher CPU usage.
- **Sample Rate** specifies the sampling rate at which the MiniFuse 2 OTG converts audio. CD quality sample rate is 44,100Hz.



For more information on buffer size, sample rate, and their impact on latency, see the [A Quick Primer On Digital Audio \[p.35\]](#) section of this manual.

5.2.1. Configuring audio in Ableton Live

In Ableton Live, go to the Live menu and click **Preferences**.

In the Preferences window, click the **Audio** tab to access the audio device settings.



Select CoreAudio (MacOS) or ASIO (Windows) in the **Driver Type** menu.

Select the MiniFuse 2 OTG in the **Audio Input Device** and **Audio Output Device** menus.




If you need to enable or disable specific input or output channels, you can click the **Input Config** or **Output Config** buttons.

5.2.2. Configuring audio in FL Studio

In FL Studio, click the **Options** menu, then click **Audio Settings**.

In the **Device** menu select the MiniFuse.

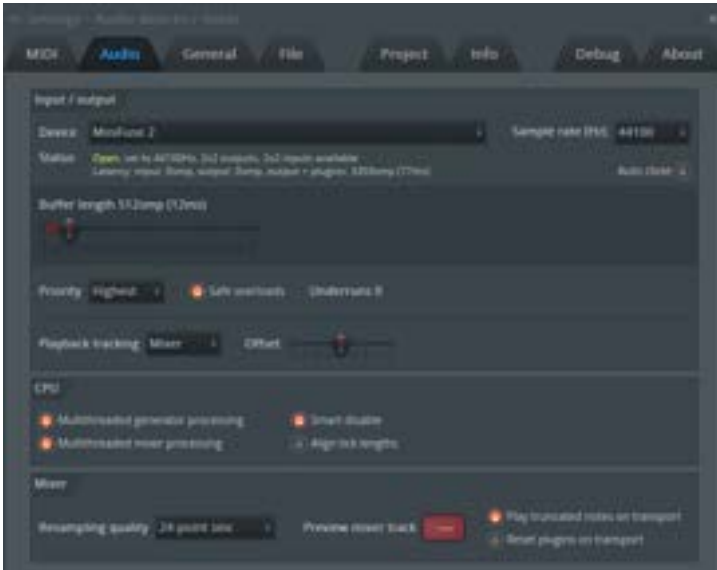

5.2.3. Configuring audio in Analog Lab

Our own Analog Lab software can work in standalone or plug-in mode. When using the standalone application, follow these steps to configure it for use with the MiniFuse 2 OTG:

In Analog Lab, click the Menu button at the top left (three horizontal lines), then click **Audio MIDI Settings**.

In the Audio MIDI Settings window, select Core Audio (macOS) or ASIO (Windows) in the **Device** section.

In the menu below, select the **MiniFuse 2 OTG**.



Audio preferences on Windows



Audio preferences on macOS

In the **Output Channels** section select Output Left + Right; this is the main speaker output from the MiniFuse.

You can press the **Play** button in the Test Tone section - you should hear a short tone played back through the MiniFuse 2 OTG.



For more tips and in-depth information on how to configure various DAWs, please be sure to visit the MiniFuse FAQ.

5.3. Recording audio into your DAW

Once your DAW has been configured to use the MiniFuse 2 OTG as an input audio device, create a new audio track where you would like to record your performance. Here we will show the process in Ableton Live. It will be similar in other applications.

In the **Audio From** menu, select External Input.

In the menu below, select the input channel where you have connected the instrument or microphone you would like to record.



If you would like to record a stereo sound source, like a synthesizer or drum machine, select a stereo pair from the menu.

Press the **Record Arm** button on the track - you should now hear the audio input played back through the computer.



If you do not wish to hear the input, you can turn off the Track Activator button, or change the Monitor setting to Off.

Next, press the **Record** button in your DAW's transport and it will begin playing back the arrangement and recording onto this track.

5.4. Using the MiniFuse 2 OTG as a standalone device with your smartphone

It's easy to use the MiniFuse 2 OTG as a portable audio recording interface with a smartphone, tablet, or similar device. You'll just need to remember a few things:

The Computer port will be used to provide power to the interface. This can be done with a USB-C cable to a power plug or to a portable battery power supply.

When the MiniFuse 2 OTG sees that the Computer port is delivering power but no data (it's pretty smart that way), it will automatically enter Standalone/DAC mode.

Your smartphone or other device will connect to the MiniFuse 2 OTG using the OTG port. This can be done with the included USB C-to-C cable when connecting to iOS and Android devices with USB-C connections. For iOS devices with a Lightning port, you'll need to use an Apple Lightning to USB 3 Camera Adapter as explained [here \[p.4\]](#), to power the device and connect to the interface with the provided USB C-to-A cable.

When in Standalone/DAC mode, the following configuration settings are made automatically:

- The Analog Inputs are routed to the OTG port directly. Remember that when used with a computer, the OTG port receives data from the computer, not directly from the Analog Inputs.
- While the OTG port receives the signals from the Analog Inputs as two separate channels, the Monitor signal to the headphones and speakers sums the Analog Inputs to mono.

6. MINIFUSE CONTROL CENTER

Your MiniFuse comes with **MiniFuse Control Center**, a convenient application that makes it easy to access its features directly from your computer.

The application can be found in:

- Mac: Applications\Arturia\MiniFuse Control Center
- Windows: C:\Program Files (x86)\Arturia\MiniFuse Control Center

The Mac and Windows versions of MiniFuse Control Center differ somewhat in their feature sets, but have many features in common. When there are significant differences, both the Mac and Windows versions will be shown.




MiniFuse Control Center (Windows)




MiniFuse Control Center (macOS)

6.1. Top Toolbar

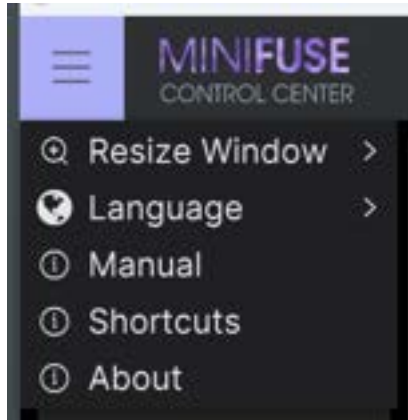

Clicking on the Main Menu icon in the upper left corner provides access to:

- **Resize Window** adjusts the size of the application for optimal viewing.
- **Language** lets you choose the interface language, which is also set up the first time you use MFCC. The default is English (**en**).
- **Register...** guides you through [registering your unit with Arturia \[p.4\]](#).
- **Manual** opens this user manual.
- **Shortcuts** pops up a window with some useful keyboard shortcuts.
- **About** displays the software version and other information.

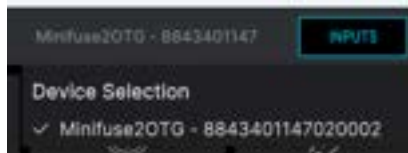

Device Selection dropdown menu

To the right of the application logo you can access **Device Selection**. If you have only one MiniFuse, its serial number will be displayed. If you have more than one unit hooked up, the drop-down menu will list each one, and you can select one to access its settings.



Sample Rate and Settings gear

Sample Rate displays the currently selected sample rate.



Sample Rate can be changed in your host application or computer settings.

The **Gear** button in the upper right display opens the Settings window.

6.2. Settings Window

The Settings window contains parameter settings that you will usually set once and leave as they are. The macOS version has two tabs – **Preferences** and **Firmware** – and the Windows version adds a third tab, **ASIO**.



Preferences tab (Windows)



Preferences tab (macOS)

The **Preferences** tab is where you can set some elements of the level meters' behavior, as well as routing audio to the OTG port.

- **Orange Color Threshold** is the level where the meter color turns from green to orange. Options include -1, -3, -6, -9, or -12 dBFS.
- **VuMeter Clip Reset Time** is how long it takes before the meter turns off the red clipping indicator. Time values can be 1.5 seconds, 3 seconds, or Infinite (the clip indicators remain lit until clicked).
- **VuMeter Peak Reset Time** is how long it takes before the meter resets the orange line that indicates the highest recent peak level. Time values can be None, 1 through 5 seconds, or Infinite (the peak indicator line remains lit, until it's replaced by a higher peak level).

- **Front Vu Meter** determines which signal is displayed on the LED meters on the front panel of the interface:
 - **Monitor OUT:** This is the signal going to the monitors and headphones.
 - **OTG IN:** This is the signal coming into the interface from the OTG device.
 - **OTG OUT:** This is the signal being sent to the OTG device from the interface (Output OTG 3/4 as sent from the Computer port).
 - **Computer OUT:** This is the signal being sent from the computer's USB Outputs 1/2. This lets you keep an eye on that signal level even while you're toggling the **USB SOURCE** button.



See the chapter on [Loopback Recording \[p.26\]](#) to learn more about these routing options and what they signify.



Note that the VU meters don't display the level of the analog Inputs 1/2 going through the direct monitor mix. The LEDs on the Gain knobs display incoming signal levels at all times, as described [here \[p.6\]](#).

- **Computer Source to OTG** determines whether Outputs OTG 3/4 (the default) or Outputs 1/2 are sent to the OTG port's device for recording. When you choose Outputs 1/2, the signal also goes to the analog Outputs 1/2 and the headphone jack. (macOS only)



Firmware tab

The **Firmware** tab is where you can check if your firmware is up to date, and upgrade it to the latest version with one click. You can also download the latest firmware file manually from the Arturia website, and upgrade from that file instead.



Firmware updates are an important way to give you continued product support and new features. We recommend checking for updates periodically, to ensure that you are getting the most optimal experience with your MiniFuse.



ASIO tab (Windows)

The **ASIO** tab is where you can select the Sample Rate and Buffer Size to be used when running in ASIO mode, and enable or disable **Safe Mode**.

ASIO is a Windows audio protocol that is optimized for low latency and high fidelity. We recommend using the ASIO driver provided by Arturia for best results; it's downloaded with MiniFuse Control Center, and is automatically installed with the software unless you specifically uncheck its install box.

What's Safe Mode for? In some cases, using a lot of processing in a DAW (e.g. with effects or plugins), or setting low buffer sizes on an older PC, can cause the CPU load to be very high. A high CPU load can increase the risk for audio dropouts (pops) to occur. In these cases, **Safe Mode** can be enabled to avoid the risk of audio dropouts, at the cost of slightly increased latency.

Finally, there's a button that says **This is the current ASIO device**. If you have more than one MiniFuse installed, you can use this button to set which MiniFuse uses the ASIO driver.

i This tab does not appear in the macOS version of the software. macOS uses its own driver, Core Audio, which doesn't require special settings and allows the use of multiple MiniFuse units at once.

6.3. Device Controls and Input Metering

The central area of the application provides access to various device controls, making it easy to change certain settings directly from your computer.

The following controls are found on the **Inputs** tab, which presents a slightly different feature set for macOS vs. Windows.



The Inputs tab in macOS, with metering and controls for the two Inputs and the OTG port



The Inputs tab in Windows, with metering for physical, OTG, and the Loopback inputs which are then sent to their associated outputs (as explained in the Loopback Recording chapter).

- **INST** toggles the high-impedance circuit for either input, for use when recording guitar, bass, or electric piano.
- **+48V** turns on *phantom power* for all inputs. Phantom power is a +48V voltage that coexists with a microphone's audio signal on the mic cable; it provides power that certain mics (usually condenser models) require to operate.



For more information on the Inst and +48V features, please see the [Front Panel Features \[p.6\]](#) section of this manual.

- **MONO** sums the signals of the two Inputs to mono for direct monitoring. When this button is off, the two Inputs are panned hard Left and Right in the Monitor signal.



The MONO setting only impacts how signal from the inputs is routed to the speakers and headphones. It does not have any effect on the stereo image of Computer or OTG playback.

- **Level Meters** provide a high-resolution display of input levels for the corresponding input. These can be useful when setting the Gain for the input. The meter features a Clip indicator which lets you know if the input has been overloaded, or "clipped". Once the Clip indicator has been activated, it will remain lit for the amount of time specified in the [Settings window \[p.20\]](#) Preferences tab.



Note that the Windows version has more level meters than the Mac version. These will be explained in the chapter on [Loopback Recording \[p.26\]](#).

6.3.1. General advice for setting input levels

Be careful not to overload the inputs, which will result in distorted recordings. Giving yourself plenty of "headroom" will ensure that you don't distort the recording in loud parts of the performance.

When recording at 24-bit resolution (bit rate), you do not need to push the input Gain very high. This is because the noise floor at higher bit rates is much lower than that of 16-bit recordings, so you can record with lower gain to avoid distortion. When you turn up the level in the mix, very little noise will be added.

The green range of the meter, from -36dB to -6dB, is the optimal range we recommend for capturing a good signal without clipping. See the three examples below - the one on the left is too quiet, the one in the middle is too loud and may result in distorted audio recordings, and the one on the right shows the ideal volume range to ensure crisp and clean recordings with lots of detail.



Level settings. L to R: too low, too high (distorted), and ideal

6.4. Loopback [Mac] and Outputs [Windows]

The other tab on the interface is **Loopback** on the Mac (with a power button icon to disable it) and **Outputs** on Windows.

The Mac and Windows versions of MiniFuse Control Center differ somewhat in their implementation of *loopback*, a feature that lets you record the output of the MiniFuse back into your DAW or other applications along with the audio inputs. You can read about this in the chapter on [Loopback Recording \[p.26\]](#).

7. LOOPBACK RECORDING

The MiniFuse Loopback Recording feature allows you to record any audio playing on your computer directly into your recording application, without the need for special cables or complicated software workarounds. Loopback Recording uses sets of virtual Loopback inputs on the MiniFuse, into which you can route any computer audio, vastly expanding the types of sound sources available for recording into your projects.




The procedure is different for macOS and Windows. We'll cover the Mac first.

7.1. Loopback (macOS)

Even though the MiniFuse 2 OTG has only two physical inputs and two physical outputs, to your recording and playback software it appears as an interface with six inputs and six outputs! Inputs and Outputs 3/4 represent the USB OTG port, and Inputs and Outputs 5/6 exist only in software – they can route audio between applications inside your computer, allowing you to do loopback easily.


Here's a block diagram of how the signals are routed:

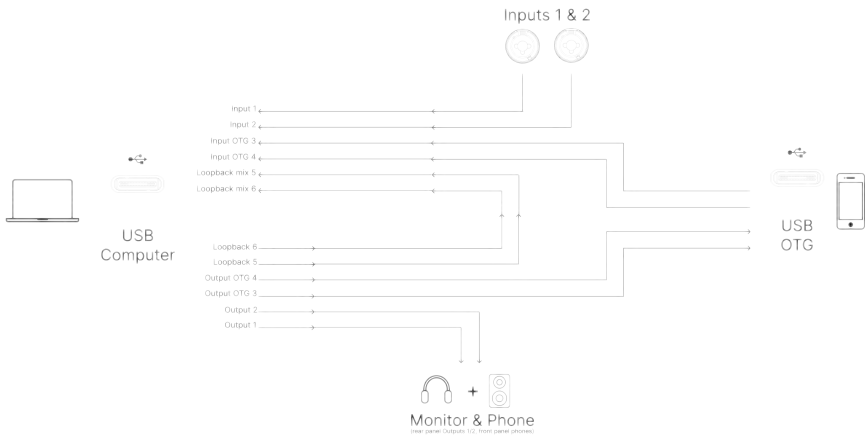

Input and output routings for macOS


These routings are controlled by the MiniFuse Control Center. Here's how.

On the Mac, clicking the **Loopback** tab opens the following screen:

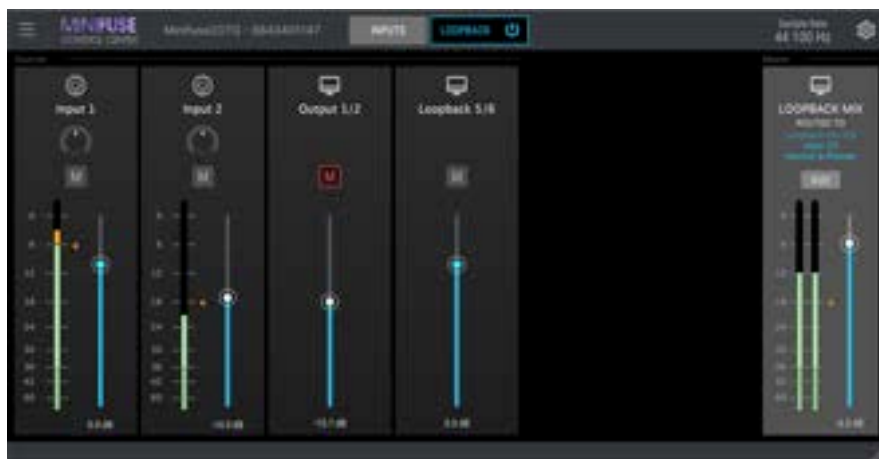

The Loopback tab

As you can see, the Loopback tab has a mixer where you can adjust the level, panning, mute status of the two Analog inputs, and two USB stereo signals: Output 1/2 and Loopback 5/6. This mix can be sent to one or more destinations, depending on the settings in the Master channel:

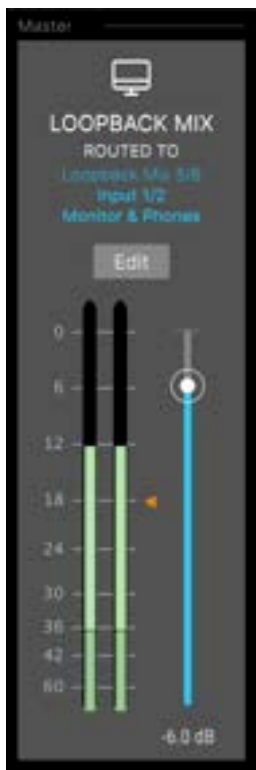

Outputs for the Loopback mix are listed here

Depending on where you've elected to route your audio, up to three destinations are listed in blue: **Loopback mix 5/6** is always enabled, and you can add either **Outputs 1/2 (USB)** or **Outputs L-R (Analog)**, or both. This is chosen by clicking the **Edit** button, which brings up these two buttons:



Settings made available from the Edit button

Duplicate Loopback Mix on USB 1-2 is useful when you're recording to software that can only see the first available pair of USB inputs (i.e. 1-2). This button routes the loopback mix to the Main USB 1-2 outputs, so you can still record the loopback mix. You can leave this button off if you're recording to software that can see USB 3-4 as inputs.

Play Loopback Mix on Hardware Outputs routes the Loopback mix to the headphone jack as well as the physical outputs on the rear panel of the MiniFuse, so you can hear what's happening in the loopback mix. This isn't needed if your recording software allows monitoring of your inputs, but it's useful for quick monitoring or for very simple recording applications.


i For best results when using this feature, set the MiniFuse's **MONITOR MIX** knob to 100% USB (all the way to the right).

7.2. Software Loopback Solution [Windows]

The **Software Loopback Solution (SLS)** is an extension of the Loopback function described above. It gives you a great deal of flexibility in recording and playing back audio, within an easy-to-understand user interface.

Even though your MiniFuse has only two physical inputs and two physical outputs, to your recording and playback software it appears as an interface with 12 inputs and 12 outputs! These six stereo pairs allow you to route audio to and from multiple apps, in addition to listening to your audio from the MiniFuse.

A block diagram of these extra routings looks like this:

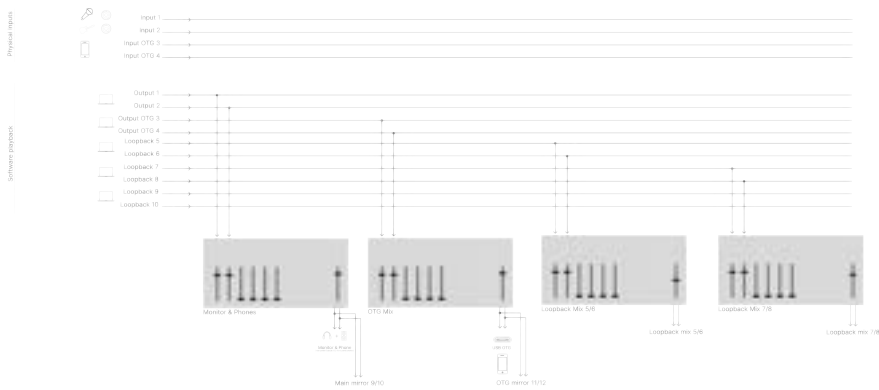

Input and output routings for the SLS

Here's how it works.

7.2.1. Physical vs. Loopback Inputs and Outputs

In addition to the physical inputs and outputs on your MiniFuse, there are four sets of stereo *Loopback inputs and Loopback outputs*. They don't exist in physical form... but your software doesn't know that!


With these Loopback channels, you can get your various apps to share audio smoothly. You can easily create workflows that are great for podcasts, live streaming, and more. It's all done in SLS inside your computer, so your MiniFuse just has to deal with what's actually going in and out of the box.

Imagine a typical livestreaming setup, where you may be:

- recording yourself and a guest on two mics (panned left and right to put some space between you), while *also*
- running OBS Streamlabs to send the video and audio out to the world, while *also*
- talking with an interviewee via Zoom or Teams, while *also*
- playing back a music bed, while *also*
- recording music to and from a DAW or other app, while *also*
- bringing in an audio feed from your smartphone

...and have it all happen *live*, rather than mixing it all together later in post-production. Thanks to SLS, you can do all these things at once, sending different mixes to video, chat, and your DAW.

This diagram shows what this setup will look like when everything's connected to the MiniFuse 2 OTG:

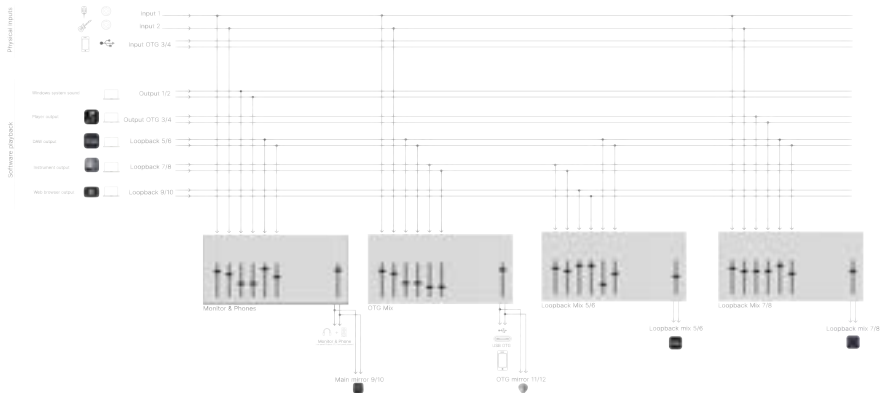

Input and output routings for our livestreaming setup example

7.2.1.1. Inputs

Clicking on the **INPUTS** button in the Top Toolbar of [MiniFuse Control Center \[p.18\]](#) shows you the following screen:



The Inputs tab, with metering for physical and Loopback inputs

As you can see, beside the meters for the Inputs (along with the indicators/buttons for Instrument inputs and phantom power), there are three more sets of meters:

- **Input OTG 3/4**
- **Loopback 5/6**
- **Loopback 7/8**
- **Loopback 9/10**

These meters show the levels of audio signals being routed into SLS from various apps, as well as the MiniFuse's front panel input jacks and audio via a device connected to the OTG port. In our livestreaming example, let's say Inputs 1 and 2 are our microphones, Input OTG 3/4 is audio coming in from a smartphone, Loopback 5/6 is audio from the video software, Loopback 7/8 is audio from the conferencing software, and Loopback 9/10 is audio coming in from your DAW playback.

7.2.1.2. Outputs and mixes

Clicking on the **OUTPUTS** button in the Top Toolbar of MiniFuse Control Center shows you the following screen:



An example livestream mix in the Outputs tab


This is where the magic happens!

There are four subtabs for four different mixes. Each mix has a different set of inputs, each of which can have its own level, pan position, and mute status. Inputs 1 and 2 can be linked so one fader or mute button controls both inputs (pan settings are never linked).

- **Monitor & Phones** is sent to the physical Left and Right Outputs of the MiniFuse. This is the mix you listen to on your speakers or headphones. It's also routed to Loopback outputs 9/10 (see the *Note* below).
- **Mix OTG** is sent to the device connected to the OTG port. This could be used to stream audio to a smartphone for recording or a second stream destination. It's also routed to Loopback 11/12.
- **Mix 5/6** is sent to a pair of output channels that your computer sees as outputs 5 and 6 from the MiniFuse. You can set any app to accept audio from that pair of outputs, so you can capture the mix you've created.
- **Mix 7/8** operates in the same way as Mix 5/6, but is sent to a different pair of output channels (7 and 8) that can be routed to a different app.


In our livestreaming example (shown above), we have a mix of music playback, conference, and DAW audio, being sent out to our livestreaming software, which is currently listening to Mix OTG as a pair of inputs.

To add a set of Loopback inputs to a mix, click on the + icon next to the last channel and select a pair of Loopback inputs from the dropdown menu:

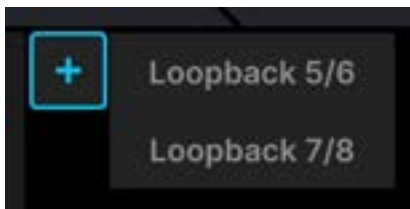

Click the + icon to add a Loopback input pair

You can remove a channel strip for a Loopback input by clicking the **X** in the top right corner. This lets you keep your mixes clean and simple, only showing what you need.

 You can't remove the channel strips for the physical inputs or outputs, or for the OTG port.

7.2.1.3. Keeping it simple: looping audio back to just one app

What if you just want to loop back your interface audio and record it in your DAW? That's easy to set up and doesn't require a fancy mix.

Remember that Loopback outputs 9/10 are always routed to the physical outputs of your interface, but can also be sent back as inputs to an app like your DAW. That routing happens automatically and is always active - you just have to tell your DAW to record inputs 9/10. Just set the levels of the Inputs and Main 1/2 output in Mix 1/2 and you're done.



This works the same way for the OTG Outputs and Loopback 11/12.

In this example, a mix of the two inputs is being sent to the physical Out 1/2 and looped back to inputs 7/8 of the recording software:



A simple mix of two microphones sent to a DAW on Loopback 9/10



This is essentially equivalent to the Loopback function in macOS.

8. A QUICK PRIMER ON DIGITAL AUDIO


To get the most out of your computer and audio interface, it is important to be familiar with several key concepts in digital audio. We'll explain these quickly below, so that you understand their impact on performance. Once you are familiar with these concepts, you will know how to best calibrate your interface and computer settings to handle different types of audio tasks.

8.1. What is latency?

Latency is the amount of time that it takes your computer to process incoming and outgoing sound. Latency is an important consideration when recording live instruments or MIDI parts, as the delay between the input (audio or MIDI) and the audio output may negatively impact the performance and recording - think of how distracting it can be to hear your own voice with a short echo while on a phone call.

Latency is a direct byproduct of sample rate and buffer size settings, so adjusting these settings in your host application or the audio driver will have an impact on latency.

8.2. Sample Rate

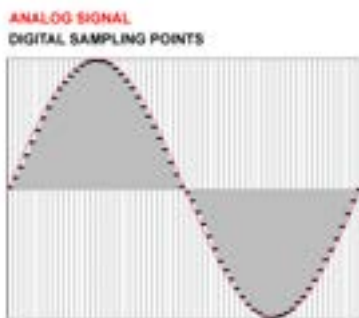


In the digital realm, analog audio signals are represented by discrete points in time, or "samples". When played back through a digital-to-analog converter, like those in computer soundcards, the digital samples are reproduced into a smooth audio signal. You can think of it like frames in a movie - each frame is a still snapshot, but when played back at a fast enough rate (24+ frames per second) our eyes perceive the sequence of static frames as continuous motion.

The sampling rate describes how many digital sampling points, or "frames", are used to approximate the audio signal over time. This also determines the highest frequency that can be captured or reproduced by the digital representation. The Nyquist-Shannon sampling theorem states that this is equal to 1/2 of the sample rate so, for example, the highest sound frequency that can be reproduced by a sample rate of 48kHz is 24kHz.

The average range of human hearing is 20 to 20,000Hz (or 20kHz). For most audio applications we recommend using a sample rate of 44.1kHz or 48kHz. The sample rate of CD-quality audio is 44.1kHz. Higher sample rates will result in significantly higher CPU usage, without much benefit to be gained in most circumstances.

i Higher sample rates like 96kHz can be useful in sound design applications where you would like flexibility to apply extreme pitch adjustments to the recording. A sound recorded at 96kHz and played at half-speed would still be able to reproduce frequencies up to 24kHz, while the same sound recorded at 48kHz and played at half speed will only be able to reproduce frequencies up to 12kHz.

8.3. Buffer Size

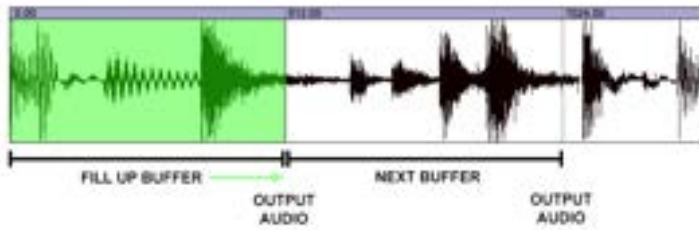

Buffer size is expressed in samples and is usually found in your application's audio settings. Think of the buffer like a bucket. As soon as it fills up with samples, it is carried away to the output. So, the smaller the bucket (buffer) the quicker it will get filled up and sent to the output, and therefore will play back with less latency. The tradeoff, however, is that smaller buffer sizes require your computer's CPU to work harder. Conversely, the bigger the bucket (buffer) the longer it will take to fill up and be sent to the output. This decreases the load on your CPU at the expense of more latency. As you will see below, changing the buffer size depending on the type of audio task being performed is common practice.



i If you experience clicks and pops in your projects, try increasing the buffer size in your host application or the audio driver.

8.4. A red herring

When experimenting with these settings, you may notice that latency decreases noticeably when using higher sample rates at the same buffer size. To go back to the bucket analogy, the sample rate is like water flowing through a hose - if you increase the water flow (higher sample rate), the same bucket will fill up faster and will be carried away to the output sooner. However, keep in mind that high sample rates come at a cost of significantly higher CPU usage, so this is not a recommended way of dealing with latency.

8.5. How to deal with latency

There are several ways to effectively deal with latency depending on the situation. Once you are familiar with the concepts outlined above, you will be able to dynamically adjust your system settings to accommodate various scenarios.

8.5.1. Recording live audio

When recording live audio from instruments and microphones, you probably want to avoid latency altogether. The MiniFuse features **Direct Monitoring** which will route the input(s) directly through the speakers or headphones. This lets you immediately hear what you're recording without incurring any latency from computer processing. Direct Monitoring is offered via the **Monitor Mix** knob, where you can control the balance between direct (Input) signal and computer (USB) signal.

i When using Direct Monitoring, you may need to turn off monitoring for the recording channel in your DAW to prevent an echo through the speakers or headphones. Direct monitoring routes the input(s) directly out of the outputs, so you will not be able to hear any software processing or effects that you may have applied to the recording channel in your application. For best results, we also recommend shutting down other CPU-intensive applications while recording live audio.

8.5.2. Recording a MIDI part

Since recording MIDI parts relies on the computer to produce sounds from your playing, Direct Monitoring is not an option in this scenario. When recording MIDI parts, you will most likely want to set a low audio buffer size in your host application's audio settings to minimize the delay between pressing a key and hearing the sound. We recommend buffer sizes of 128-256 samples but you could go lower or may need to go higher, depending on your particular computer system and how much CPU your project is using.

8.5.3. Mixing and mastering

Mixing and mastering are not time-critical tasks, so latency is not as important in these situations. It's also likely that by this stage your project has quite a few tracks and plugins, so your CPU may already be working hard to keep up. For mixing and mastering purposes we recommend buffer sizes of 1024-2048 samples. Again, depending on your specific system and project you may be able to use lower settings.

9. SPECIFICATIONS

9.1. Box Contents

- Audio interface
- USB-C to USB-C cable
- USB-C to USB-A cable
- Exclusive software bundle containing:
 - Arturia's Pre 1973, Rev PLATE-140, Delay TAPE-201, Chorus JUN-6 audio effects
 - Arturia's Analog Lab Intro containing thousands of ready-to-use instruments and sounds
 - Ableton Live Lite
 - Steinberg Cubase LE 14 and Cubasis LE 3
 - iZotope Voice Enhancement Assistant (VEA)
 - 3-month complimentary subscription to Splice
 - 3-month complimentary subscription to Auto-Tune Unlimited
 - Ableton Live Life sessions curated by producers around the globe

9.2. Hardware Specifications

Line Inputs	
Input impedance	16k Ω
Maximum input Level	+9dBu (XLR), +22dBu (TRS)
Gain range	56dB
Frequency response 20Hz to 20kHz	+/-0.05dB (min gain)
Dynamic range	110dB typical (A-weighted)
THD+N @ 1kHz	-100dB typical (un-weighted)
Cross-talk @ 1kHz	-116dB

Instrument Inputs	
Input impedance	1.1M Ω
Maximum input Level	+11.5dBu
Gain range	56dB
Frequency response 20Hz to 20kHz	+/-0.06dB (min gain)
Dynamic range	110dB typical (A-weighted)
THD+N @ 1kHz	-91dB typical (A-weighted)

Microphone Preamps	
Input impedance	2.5k Ω
Maximum input Level	+9dBu
Gain range	56dB
Equivalent Input Noise (EIN)	-129dB typical (A-weighted)
Frequency response 20Hz to 20kHz	+/-0.06dB (min gain)
Dynamic range	110dB typical (A-weighted)
THD+N @ 1kHz	-100dB typical (A-weighted)
Cross-talk @ 1kHz	-116dB

Speaker Outputs	
Output impedance	94 Ω
Maximum output Level	+12dBu
Frequency response 20Hz to 20kHz	+/-0.09dB
Dynamic range	107.5dB typical (A-weighted)
THD+N @ 1kHz	-101dB typical (un-weighted)

Phones	
Output impedance	10 Ω
Maximum output Level	+11.4dBu
Frequency response 20Hz to 20kHz	+/-0.09dB
Dynamic range	104dB (A-weighted)
Power @ 33ohm	137mW

Various	
Supported frequency rates	44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
USB 2 Audio compatibility	Windows, macOS, iOS, Android (OTG) - please see arturia.com for details

10. DECLARATION OF CONFORMITY

USA

Important notice: DO NOT MODIFY THE UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirement. Modifications not expressly approved by Arturia may void your authority, granted by the FCC, to use the product.

IMPORTANT: When connecting this product to accessories and/or another product, use only high-quality shielded cables. Cable (s) supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

NOTE: This product has been tested and found to comply with the limits for a Class B Digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide a reasonable protection against harmful interference in a residential environment. This equipment generate, use and radiate radio frequency energy and, if not installed and used according to the instructions found in the user manual, may cause interferences harmful to the operation to other electronic devices. Compliance with FCC regulations does not guarantee that interferences will not occur in all the installations. If this product is found to be the source of interferences, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

- Relocate either this product or the device that is affected by the interference.
- Use power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter(s).
- In the case of radio or TV interferences, relocate/ reorient the antenna. If the antenna lead-in is 300-ohm ribbon lead, change the lead-in to coaxial cable.
- If these corrective measures do not bring any satisfied results, please contact the local retailer authorized to distribute this type of product. If you cannot locate the appropriate retailer, please contact Arturia.

The above statements apply **ONLY** to those products distributed in the USA.

CANADA

NOTICE: This class B digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulation.

AVIS: Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

EUROPE



This product complies with the requirements of European Directive 89/336/EEC

This product may not work correctly by the influence of electro-static discharge; if it happens, simply restart the product.

11. SOFTWARE LICENSE AGREEMENT

In consideration of payment of the Licensee fee, which is a portion of the price you paid, Arturia, as Licensor, grants to you (hereinafter termed "Licensee") a nonexclusive right to use this copy of the SOFTWARE.

All intellectual property rights in the software belong to Arturia SA (hereinafter: "Arturia"). Arturia permits you only to copy, download, install and use the software in accordance with the terms and conditions of this Agreement.

The product contains product activation for protection against unlawful copying. The OEM software can be used only following registration.

Internet access is required for the activation process. The terms and conditions for use of the software by you, the end-user, appear below. By installing the software on your computer you agree to these terms and conditions. Please read the following text carefully in its entirety. If you do not approve these terms and conditions, you must not install this software. In this event give the product back to where you have purchased it (including all written material, the complete undamaged packing as well as the enclosed hardware) immediately but at the latest within 30 days in return for a refund of the purchase price.

1. Software Ownership Arturia shall retain full and complete title to the SOFTWARE recorded on the enclosed disks and all subsequent copies of the SOFTWARE, regardless of the media or form on or in which the original disks or copies may exist. The License is not a sale of the original SOFTWARE.

2. Grant of License Arturia grants you a non-exclusive license for the use of the software according to the terms and conditions of this Agreement. You may not lease, loan or sublicense the software. The use of the software within a network is illegal where there is the possibility of a contemporaneous multiple use of the program.

You are entitled to prepare a backup copy of the software which will not be used for purposes other than storage purposes.

You shall have no further right or interest to use the software other than the limited rights as specified in this Agreement. Arturia reserves all rights not expressly granted.

3. Activation of the Software Arturia may use a compulsory activation of the software and a compulsory registration of the OEM software for license control to protect the software against unlawful copying. If you do not accept the terms and conditions of this Agreement, the software will not work.

In such a case the product including the software may only be returned within 30 days following acquisition of the product. Upon return a claim according to § 11 shall not apply.

4. Support, Upgrades and Updates after Product Registration You can only receive support, upgrades and updates following the personal product registration. Support is provided only for the current version and for the previous version during one year after publication of the new version. Arturia can modify and partly or completely adjust the nature of the support (hotline, forum on the website etc.), upgrades and updates at any time.

The product registration is possible during the activation process or at any time later through the Internet. In such a process you are asked to agree to the storage and use of your personal data (name, address, contact, email-address, and license data) for the purposes specified above. Arturia may also forward these data to engaged third parties, in particular distributors, for support purposes and for the verification of the upgrade or update right.

5. No Unbundling The software usually contains a variety of different files which in its configuration ensure the complete functionality of the software. The software may be used as one product only. It is not required that you use or install all components of the software. You must not arrange components of the software in a new way and develop a modified version of the software or a new product as a result. The configuration of the software may not be modified for the purpose of distribution, assignment or resale.

6. Assignment of Rights You may assign all your rights to use the software to another person subject to the conditions that (a) you assign to this other person (i) this Agreement and (ii) the software or hardware provided with the software, packed or preinstalled thereon, including all copies, upgrades, updates, backup copies and previous versions, which granted a right to an update or upgrade on this software, (b) you do not retain upgrades, updates, backup copies and previous versions of this software and (c) the recipient accepts the terms and conditions of this Agreement as well as other regulations pursuant to which you acquired a valid software license.

A return of the product due to a failure to accept the terms and conditions of this Agreement, e.g. the product activation, shall not be possible following the assignment of rights.

7. Upgrades and Updates You must have a valid license for the previous or more inferior version of the software in order to be allowed to use an upgrade or update for the software. Upon transferring this previous or more inferior version of the software to third parties the right to use the upgrade or update of the software shall expire.

The acquisition of an upgrade or update does not in itself confer any right to use the software.

The right of support for the previous or inferior version of the software expires upon the installation of an upgrade or update.

8. Limited Warranty Arturia warrants that the disks on which the software is furnished is free from defects in materials and workmanship under normal use for a period of thirty (30) days from the date of purchase. Your receipt shall be evidence of the date of purchase. Any implied warranties on the software are limited to thirty (30) days from the date of purchase. Some states do not allow limitations on duration of an implied warranty, so the above limitation may not apply to you. All programs and accompanying materials are provided "as is" without warranty of any kind. The complete risk as to the quality and performance of the programs is with you. Should the program prove defective, you assume the entire cost of all necessary servicing, repair or correction.

9. Remedies Arturia's entire liability and your exclusive remedy shall be at Arturia's option either (a) return of the purchase price or (b) replacement of the disk that does not meet the Limited Warranty and which is returned to Arturia with a copy of your receipt. This limited Warranty is void if failure of the software has resulted from accident, abuse, modification, or misapplication. Any replacement software will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer.

10. No other Warranties The above warranties are in lieu of all other warranties, expressed or implied, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. No oral or written information or advice given by Arturia, its dealers, distributors, agents or employees shall create a warranty or in any way increase the scope of this limited warranty.

11. No Liability for Consequential Damages Neither Arturia nor anyone else involved in the creation, production, or delivery of this product shall be liable for any direct, indirect, consequential, or incidental damages arising out of the use of, or inability to use this product (including without limitation, damages for loss of business profits, business interruption, loss of business information and the like) even if Arturia was previously advised of the possibility of such damages. Some states do not allow limitations on the length of an implied warranty or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.